


INSTALLATION


1. Insert the aluminum tube into the base.



2. Put the lens holder into the aluminum tube, lock it where marks the lines.

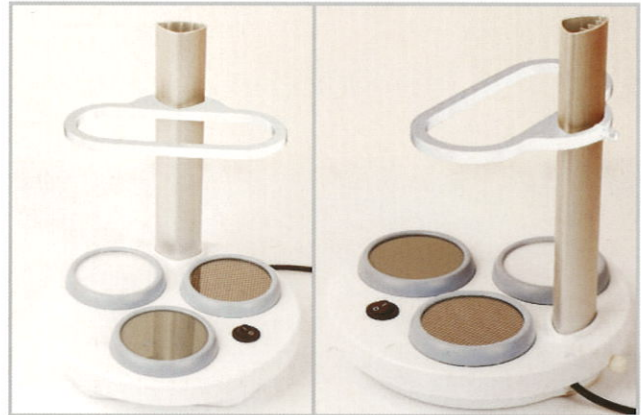

3. Put the top into the aluminum tube.

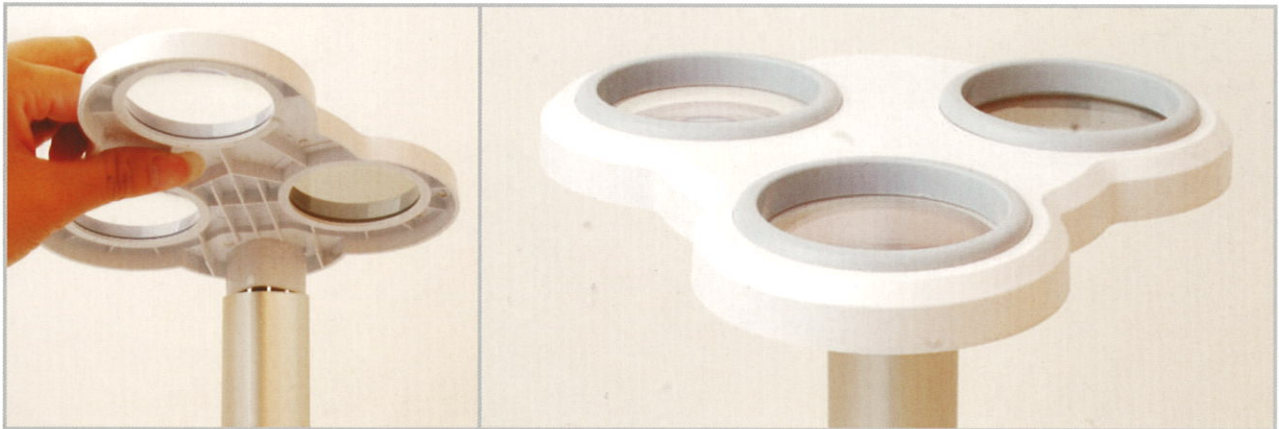

4. Insert the small aluminum tube from the bottom.



5. Lock the screw clockwise.

