

No. 3T-004

Screws Extractor

32x76x145mm

166g



Interchangeable


Extruding Pin for screws broken with the head,
Fixing Pin for screws broken with the thread



Extruding Pin
No. 3T-004E
Size 0.9 for screw 1.2
Size 1.1 for screw 1.4



Fixing Pin
No. 3T-004D
Size 1.0 for screw 1.2
Size 1.2 for screw 1.4

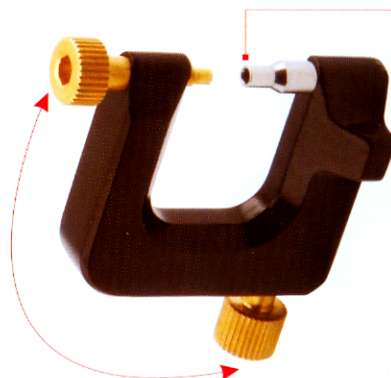

The screw or
screw remains
drop here

Spare No. 3T-004F



Hexagon Driver
No. 3T-004G



Tungsten Drilling Bits
No. 3T-004-1050
Size 1.0 for screw 1.2
No. 3T-004-1250
Size 1.2 for screw 1.4



Screw Tap Handle
No. 3T-A19-H




Screw Tap
No. 3T-004C
Size : M1.2 / M1.4 / M1.6

Take out the screws broken with the
thread.




Take out the screws broken with the
head.

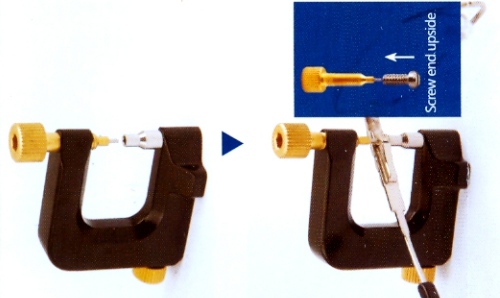

Screw end upside



Screw end upside

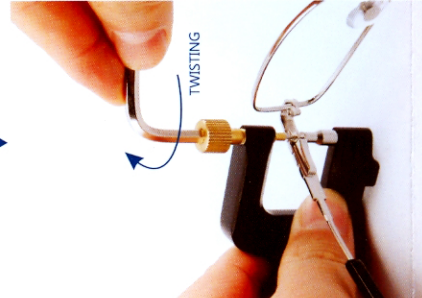


TWISTING



DRILLING

Hand drill not
included in 3T-004,
more info refer to
Page#110

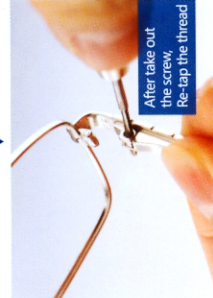

After take out
the screw,
Re-tap the thread



After take out
the screw,
Re-tap the thread